
Manufacturers of Quality Electrical Products

TVBRA1 K TVBRA1 KGC(w/ Ground Clip)




Installation Instructions For: TVBRA1K Pre-Wired TV Bridge for Flat Screen Televisions

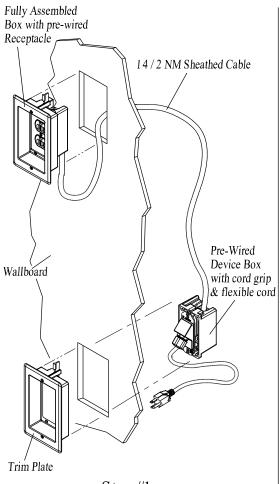


Step #1
*Cut (2) 3-1/2" wide X 5-7/8" high holes in wall

- locating the top hole in desired location for TV.
 *Locate the bottom hole directly below the top hole, close to an existing electrical outlet.
- *Drop the pre-wired Device Box Assembly & 14/2
 Sheathed Cable thru top hole & feed down toward

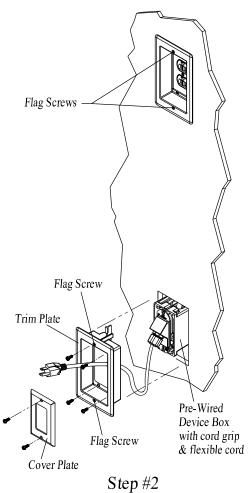

*Position & secure top box to wall by tightening (2) Flag Screws. (see illustration)

- *Pull Flexible Cord & Device Box thru bottom hole & continue to pull Flexible Cord thru Trim Plate.
- *Attach Device Box to Trim Plate with (4) screws provided & secure Trim Plate to wall by tightening (2) Flag Screws.
- * Attach Cover Plate to Trim Plate using (2) screws provided.

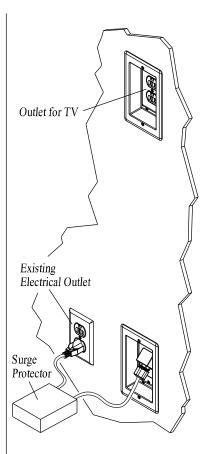

View of Completed Installation of TVBRALK Pre-Wired TV Bridge Step #3

*Energize TVBRAI K Pre-Wired TV Bridge by plugging into existing outlet or surge protector.

Note:

bottom hole.

- *This product is not designed to be an extension of a structure's hard wiring.
- *Components are not energized until the flexible cord is plugged into an existing outlet or surge protector.
- *Follow all instructions, do not plug in the flexible cord until installation is complete.

If you have any questions or if parts are missing, please call our Customer Service Department at 1-800-233-4717.

Do not call or return this product to your local store or distributor.

